


Remote Control Display


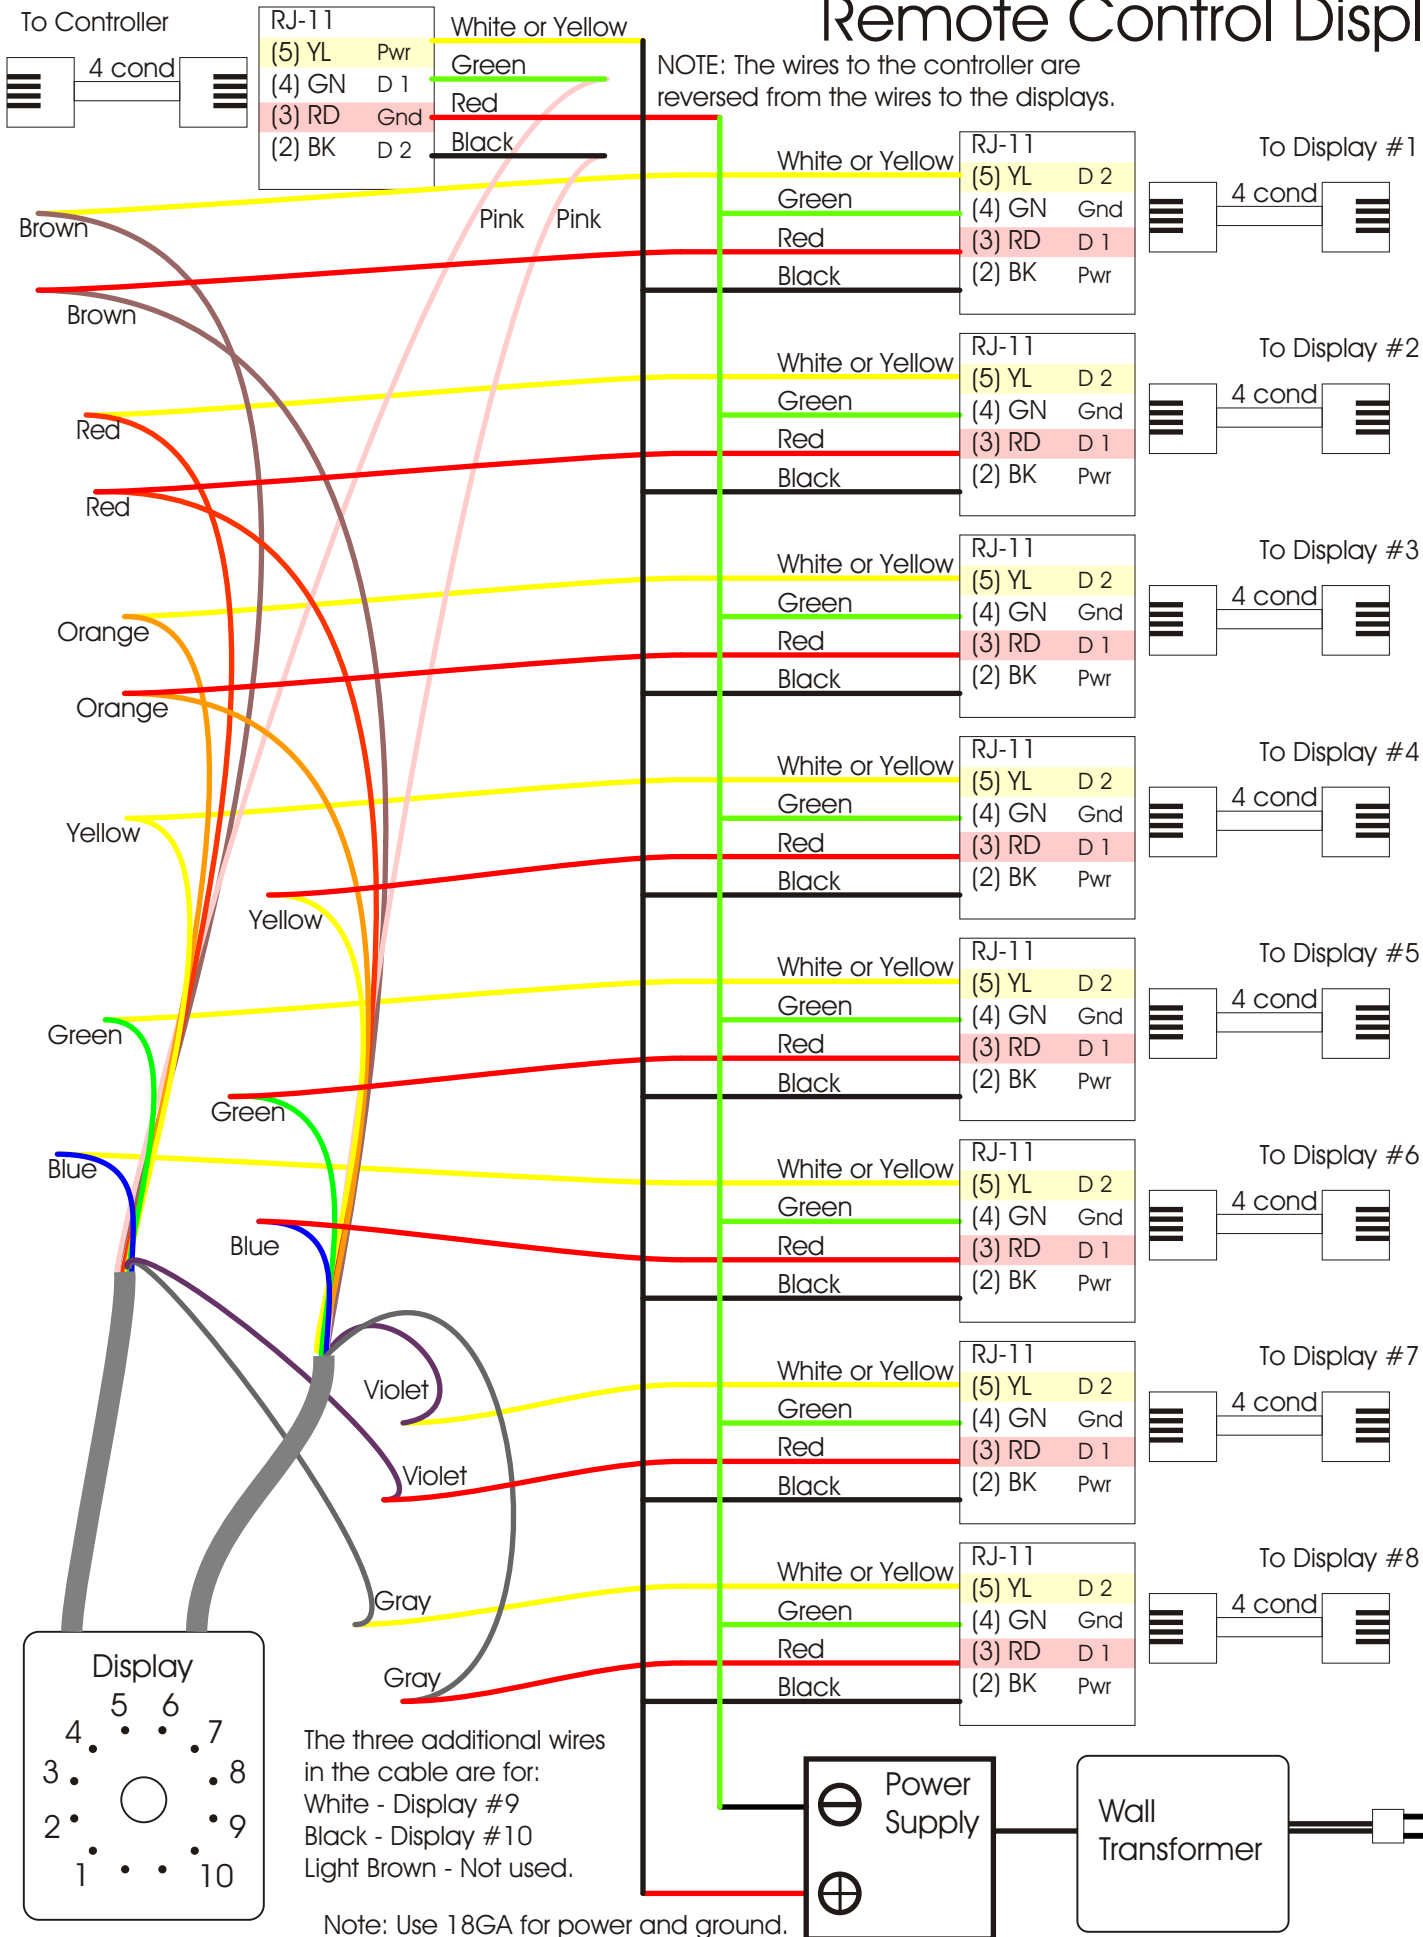


Remote Control Display

NOTE: Connect J3 to the cable harness that connects to the displays.



WARNING: Do NOT power the system from J1. The internal power supply cannot power multiple displays.

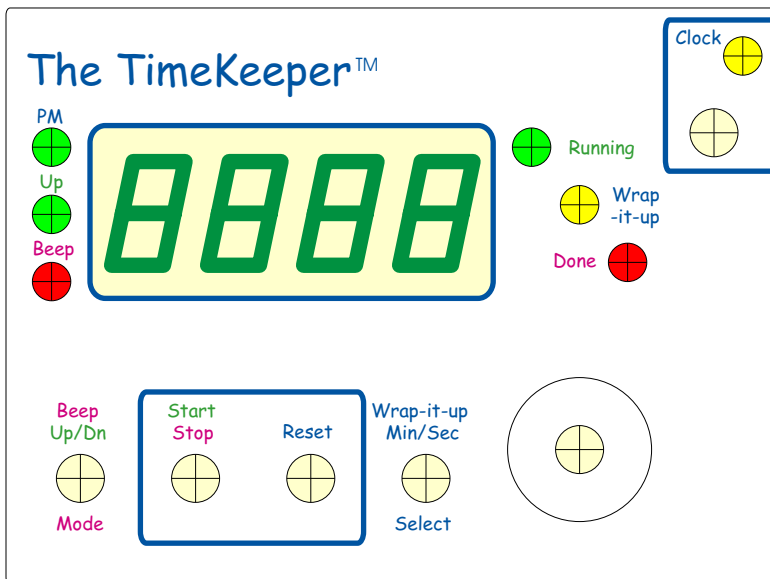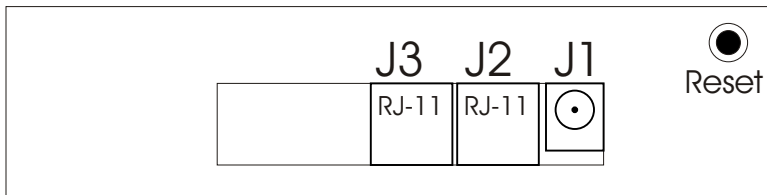

Instructions:

Turn the **knob** on the “**Display**” selector to the desired display. All operations affect only the selected display.

Press the **Reset** button.

Turn the **knob** on the TimeKeeper™ to the desired count down time.

Press the **Start** button to start the timer. The green **Running** LED will come on.

When the timer reaches 0.00, the timer will stop and the red **Done** LED will come on.

The **Mode** button selects count up or count down mode.

If the unit appears to stop responding to commands, press the **Reset** button to restart.

NOTE: When using the TimeKeeper™ as a remote display controller, the Beep, Clock and Select functions are not used. Also, the PM, Beep, Clock and Wrap-it-up LEDs are not used.