

# TMR216B



## Product

Clock/Timer, 6 Digits

### Description:

Surface-mount Count Up/Down Timer with time-of-day clock, six-digit LED Display, 6 stored presets, and Red-Yellow-Green LEDs.

**Item:** TMR216B

**UPC:** 788581650271

**EAN:** 0788581650271

**Stock Status:** Usually in Stock.

**Dimensions:** 5.75" x 4" x 1.25"

**Weight:** 0.8 lbs.

**MSRP:** \$595.00

## Specifications

- (1) Two RJ45 modular connectors for RS422 serial data transmission and reception.
- (1) Solder terminals for optional loud beeper.
- (1) Construction: Metal enclosure, black powder coated finish.
- (1) Power requirements: 10-13VAC or 12-15VDC.
- (1) Current consumption: 100mA.

## Features

- (1) Six-digit LED fourteen-segment alphanumeric Display with 0.54" high digits.
- (1) Connect two or more TimeKeepers™ together. One becomes the timer, and the others become remote displays.
- (1) Six-digit count up timer settable to Day:Hour:Min, Hour:Min:Sec, or Min:Sec.Hundredths.
- (1) Six-digit count down timer settable to Day:Hour:Min, Hour:Min:Sec.
- (1) Made of ruggedized aluminum construction.
- (1) Count Up Timer.
- (1) Count Down Timer. (0 to 99.59 MM:SS or 0 to 99:59:59 HH:MM:SS).
- (1) User-programmable Green, Yellow and Red warning Indicators.
- (1) Internal beeper provides audible sound when the timer reaches zero.
- (1) Button to turn beeper on/off.
- (1) Up to 6 user-programmable stored settings.
- (1) Built-in time-of-day clock displays hours/minutes in 12/24 hour time or minutes/seconds.
- (1) Optional 900MHz or 2.4GHz RF Wireless communications interface.

## Item Includes

- (1) TMR216B Count up/down timer
- (1) RC Reference card
- (1) WD Wiring diagram
- (1) CAT-5E cable, 7ft.
- (1) Not Included: Transformer

## Required Accessories

- (1) WT12VAC1200MA-RA 12V AC, 1200mA transformer

## Optional Accessories

Works with any size Alzatex display, Red-Yellow-Green indicator or TimeKeeper™. Examples:

- (1) DSP254B Large LED wall display
- (1) DSP506B Large LED wall display
- (1) DSP704B Large LED wall display
- (1) RYG11ABBK Red-yellow-green indicator lamps

If you have a Crestron, AMX, RCI or PC, use the RS232 adapter

- (1) PS422DB9A0 RS232 to RS422 converter.