

 
Arcade Timing system.

Instructions



The display is operated by Start-Stop RSSR inputs.

The start button resets and starts the timer.
The stop button stops the timer.

The small reset on the side of the start button resets and stops the timer.

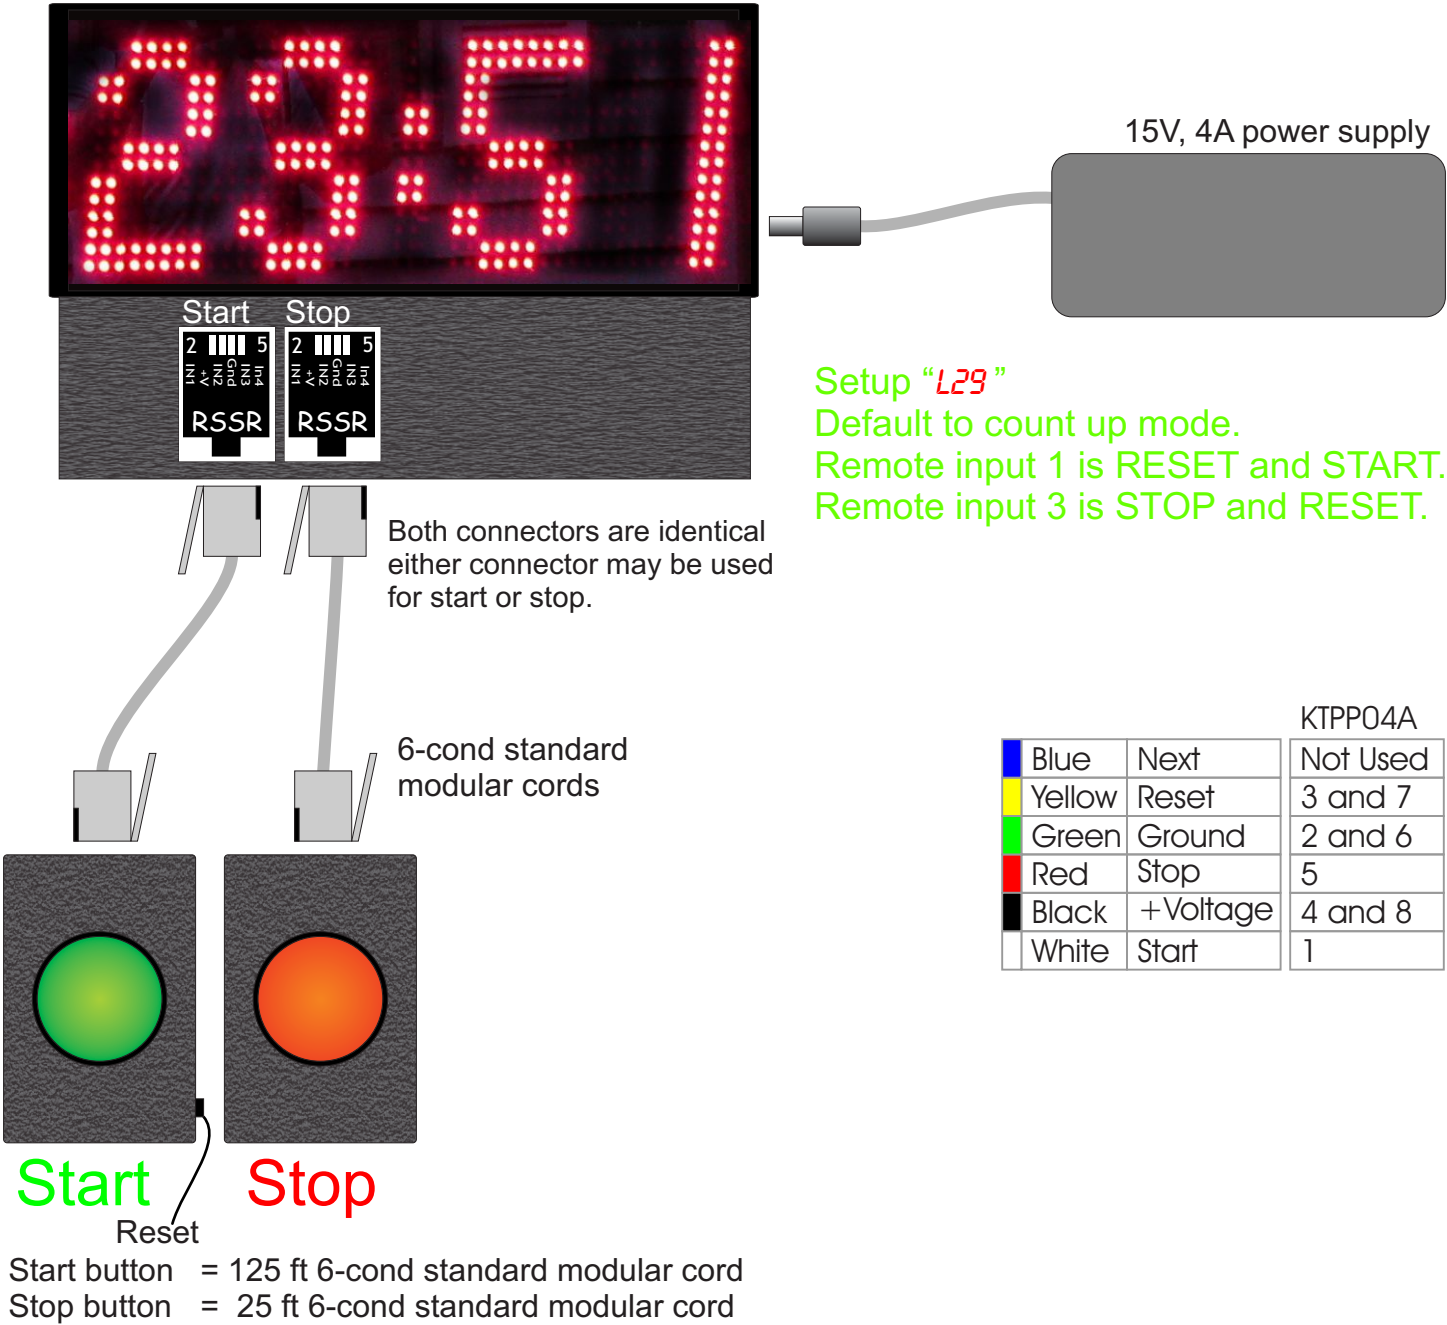

Green Start Button

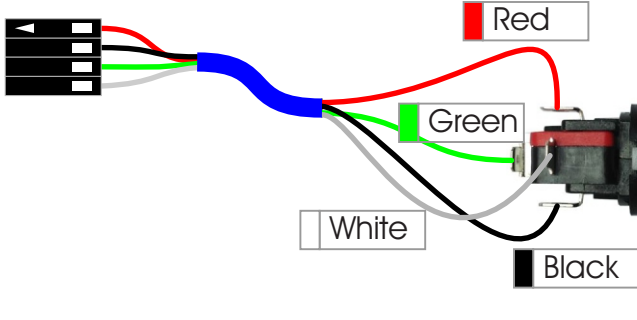 
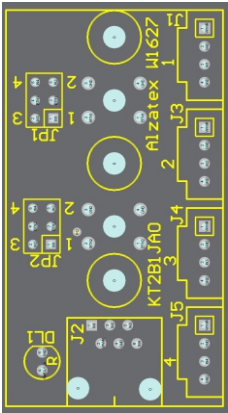 


KT2B1JA0			
Red	1	+Voltage	
Black	2	Ground	
Green	3	Button	
White	4	Ground	

Big Button			
Red		LED+	
Black		LED-	
Green		Button	
White		Button	



  Red Stop Button

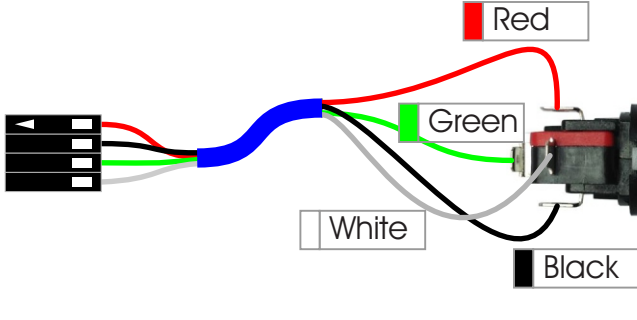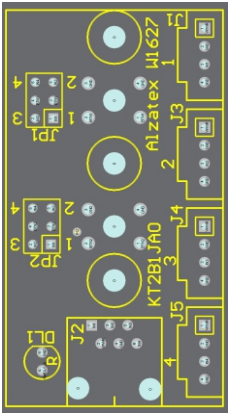

KT2B1JA0			
Red	1	+Voltage	
Black	2	Ground	
Green	3	Button	
White	4	Ground	

Big Button			
Red		LED+	
Black		LED-	
Green		Button	
White		Button	



RJ11A0		
White	1	Start
Black	2	+Voltage
Red	3	Stop
Green	4	Ground
Yellow	5	Reset
Blue	6	-----

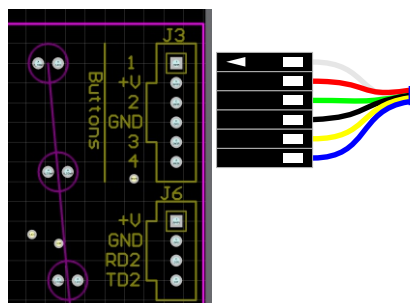 
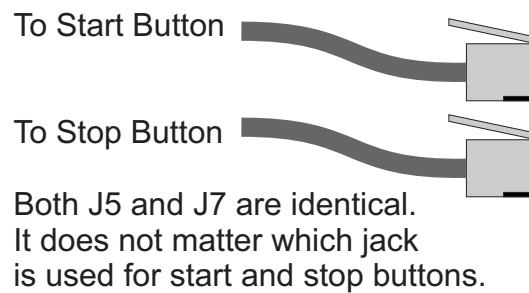 


Diagram of J3 connector pinout:

Pin	Signal
1	REM1
2	PPWR
3	REM2
4	GND
5	REM3
6	REM4