

 
Arcade Timing system.

Instructions

The top display is operated by Start-Stop inputs 1
The bottom display is operated by Start-Stop inputs 2


The start button resets and starts the timer.
The stop button stops the timer.

The small reset on the side of the start button resets
and stops the timer.

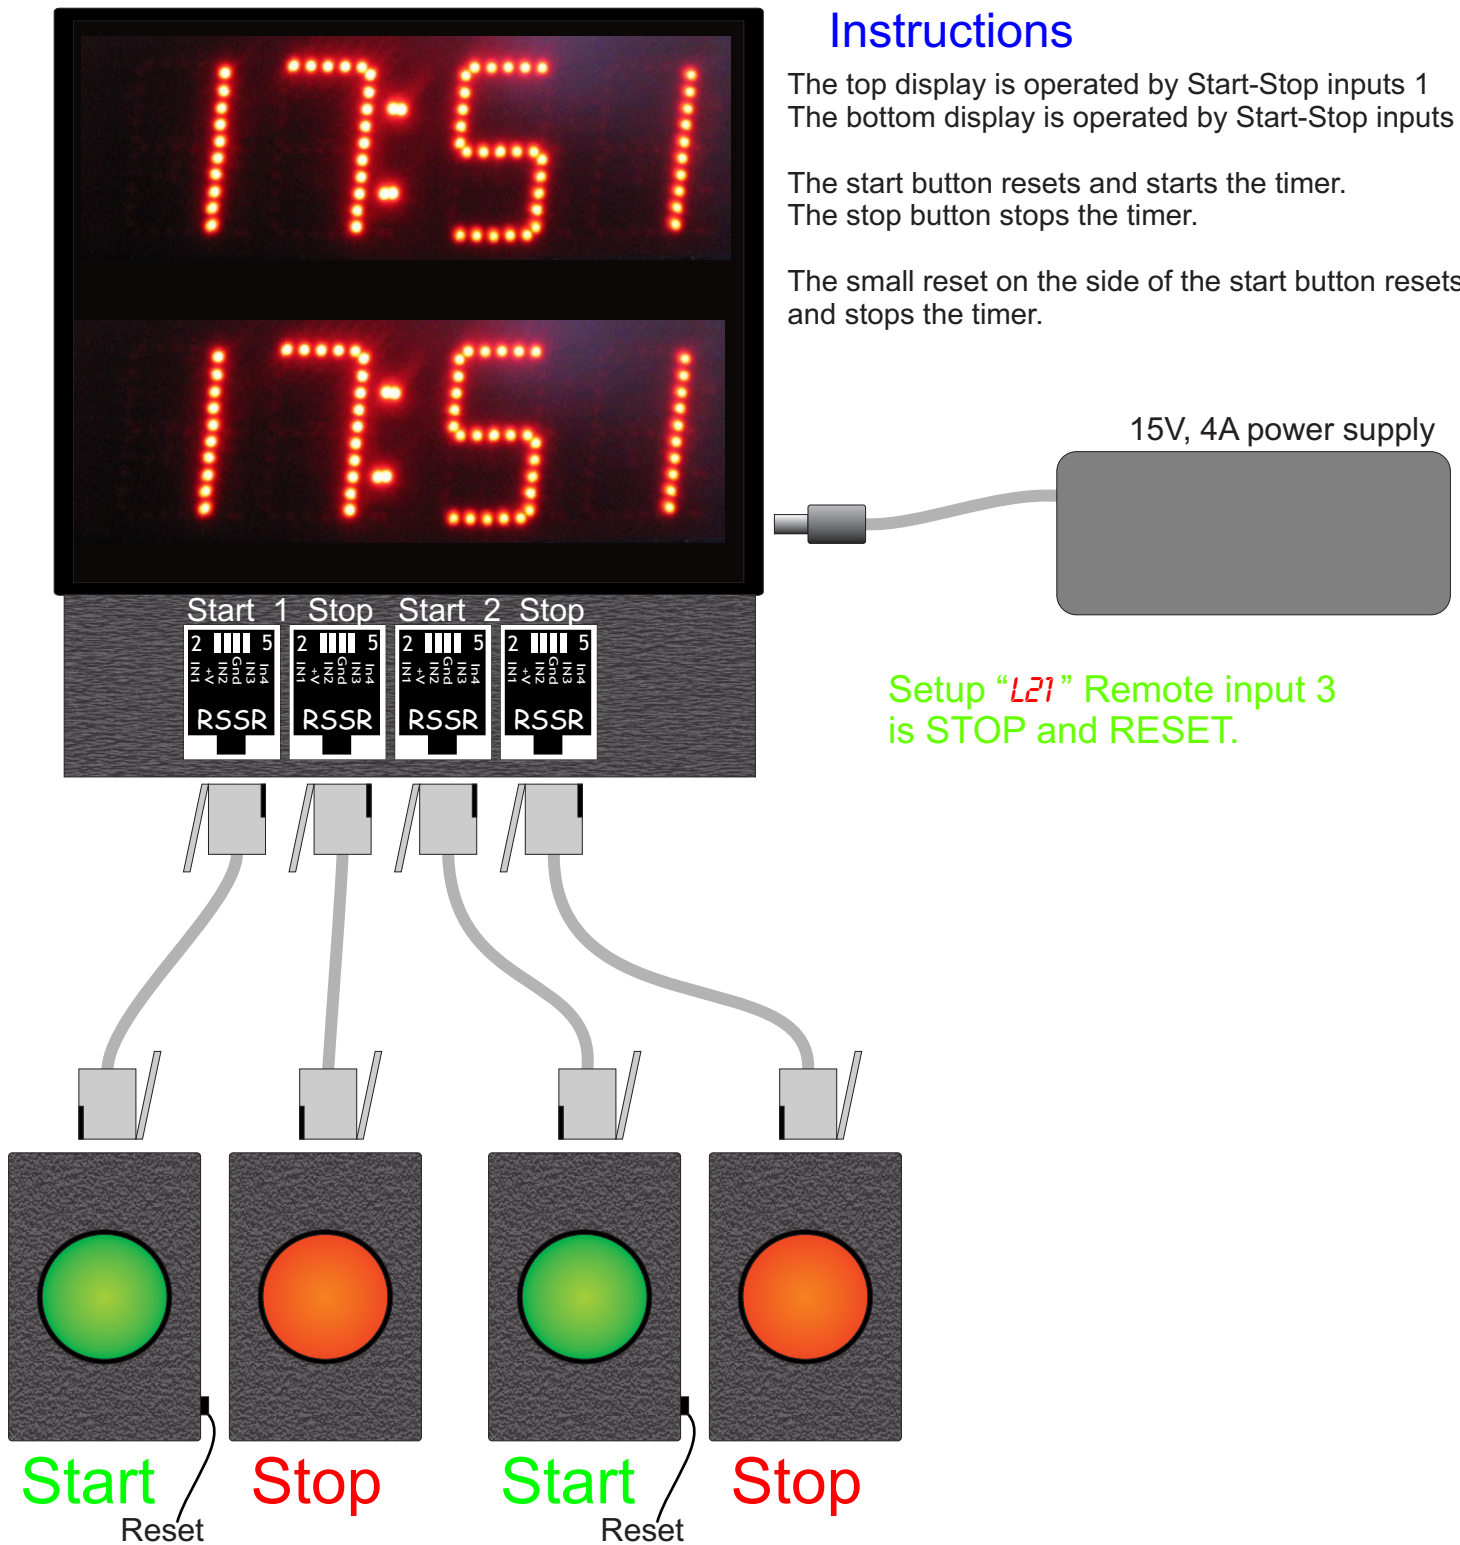


Setup "L21" Remote input 3
is STOP and RESET.

 Start button = 100 ft 4-cond standard modular cord
Stop button = 50 ft 4-cond standard modular cord

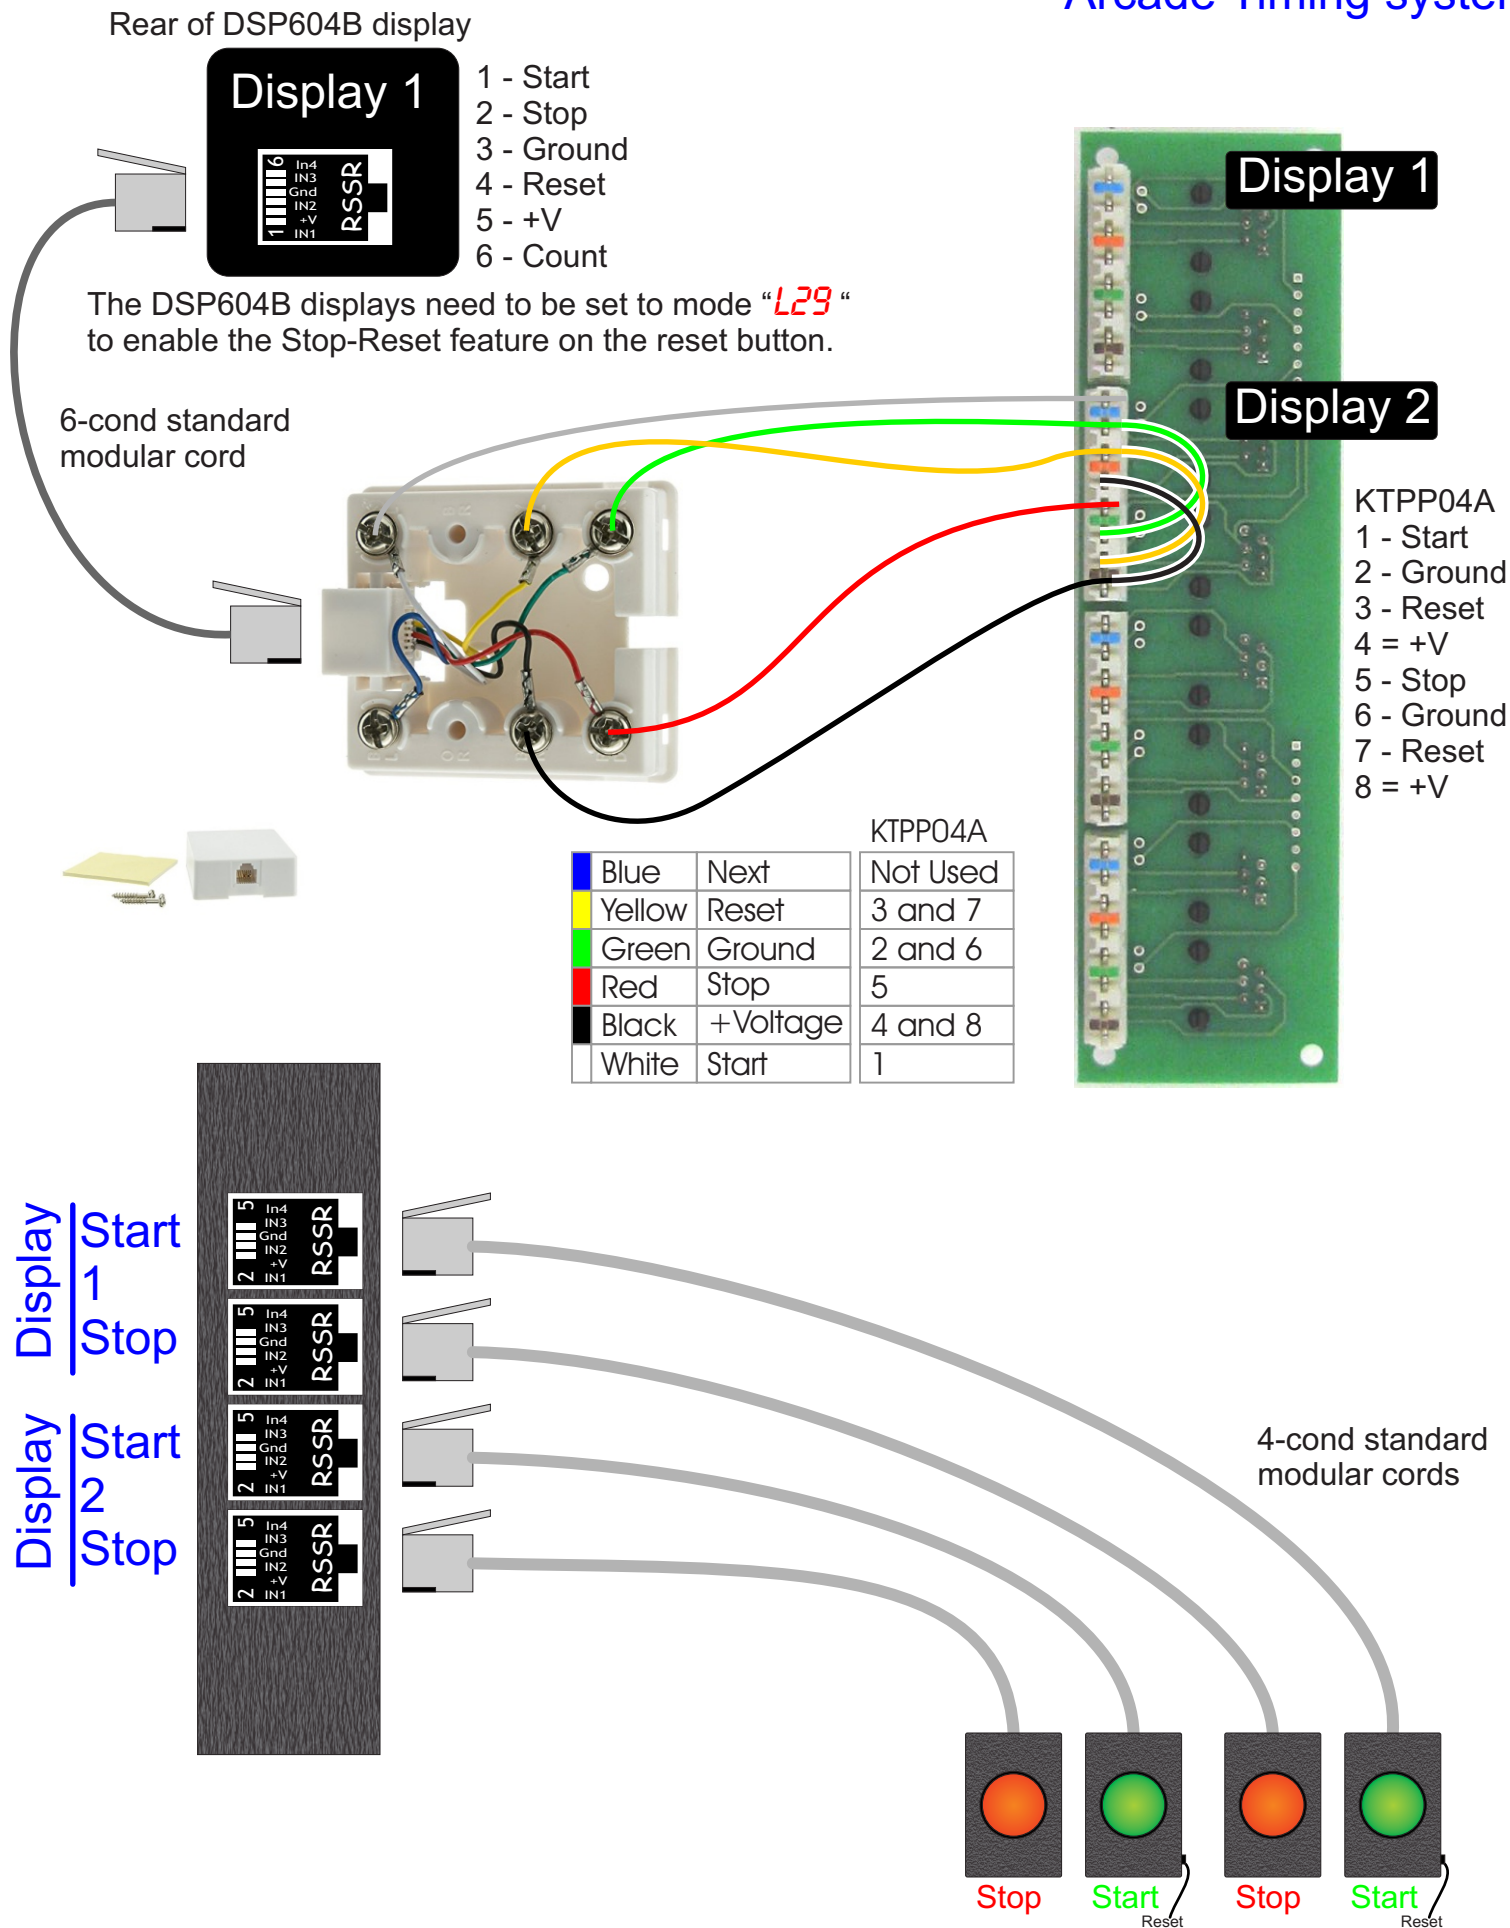

Green Start Button

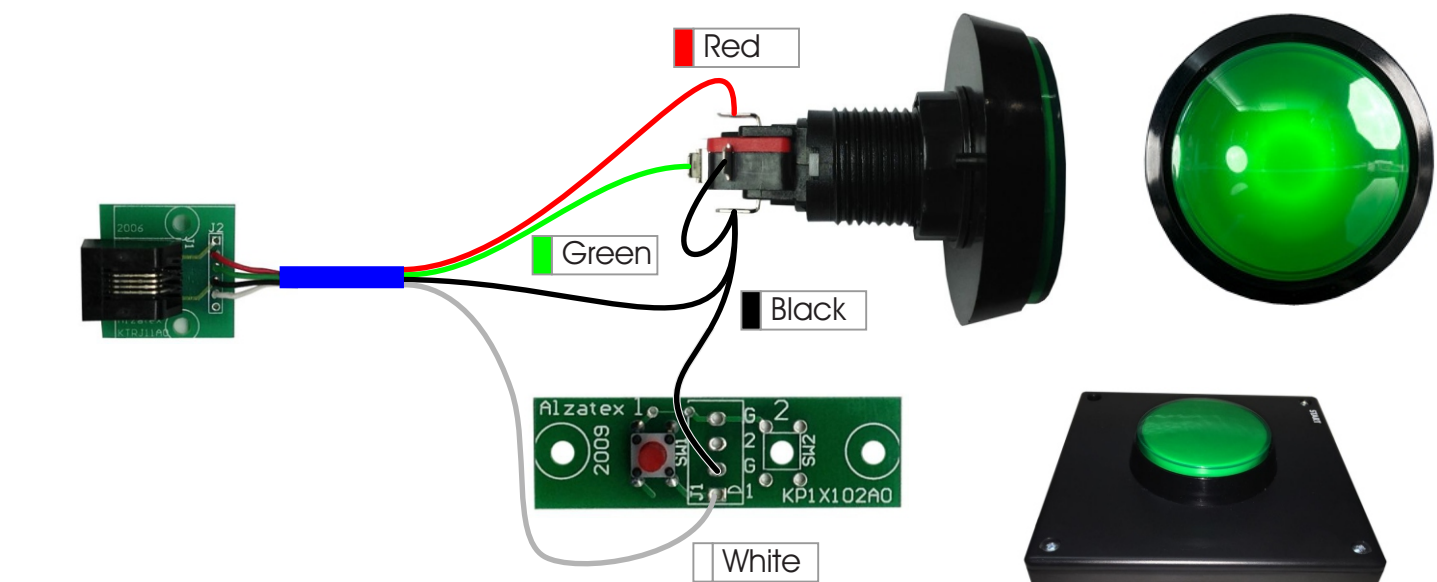 

Red Stop Button

