



Use the internal keypad or connect an external keypad to the IN connector on the end of the display.

KP215SA or KP215ASM
Remote Button Module



Plug battery into the display cord to operate.

Plug the battery into the charger to charge.

Disconnect when not using to prevent over discharging and damaging the battery.

Always replace with ATC-5 (5 amp) fuse.



Warning! This display will draw a small amount of current from the Battery even if it is not showing any signs of life. When the display is getting dim, the battery should be disconnected and re-charged. Failure to do this may damage the battery or shorten its life.

It is recommended to keep the battery charged when not in use. The battery will be charging anytime it is hooked up to the charger box and the box is supplied with external power. The display can not be connected to the battery while it is charging.

If the unit is to be unused for a long time, charge the battery first then disconnect the battery from the charger before storing.



Power IN
12-16VDC

The OUT connector can be used to operate auxiliary displays or other devices.

Battery Charger



12 VDC SLA Battery

BAT-

BAT+

