


Wall Display for Window 1


DSP-502B-NS

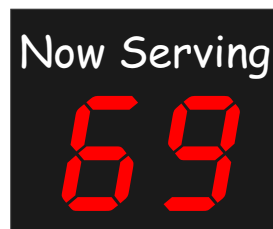

RS422-IN

Wall Display for Window 2

DSP-502B-NS

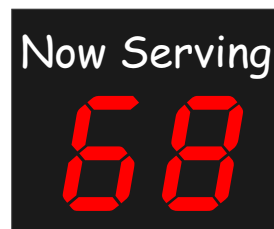


RS422-OUT

RS422-IN

Wall Display for Window 3

DSP-502B-NS

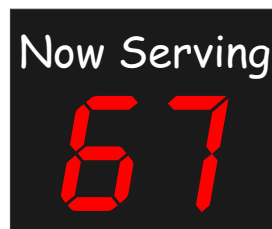


RS422-OUT

RS422-IN

Lobby Wall Display

DSP-505B-NSW

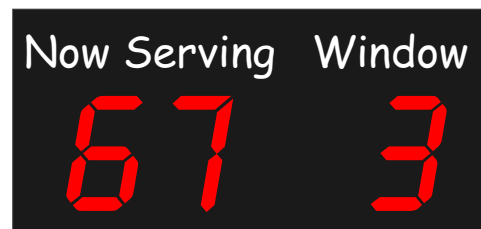

RS422-OUT

RS422-IN

Window 1

DSP104B6-RF900



RS422-OUT

 RF900A-TAT
 Setup "U3T"

Window 2

DSP104B6-RF900



Button 1

Button 2

Button 3

Buttons on the front of the DSP104B6:

Pressing button A increments the count for the respective window. The ticket number is displayed on the DSP104 LED display and on the respective wall display.

Buttons B and C are not used.

Buttons on the side of the DSP104B6:

Button 1 not used

Press and hold Button 2 to display the unit address on all displays.

Press and hold button 3 to reset the ticket number to zero for all service windows.

Window 3

DSP104B6-RF900




Options:

Up to 16 service windows

Install window displays for each service windows, Install lobby one or more wall displays or both window displays and lobby displays.

Optional beeper in the wall/window displays.

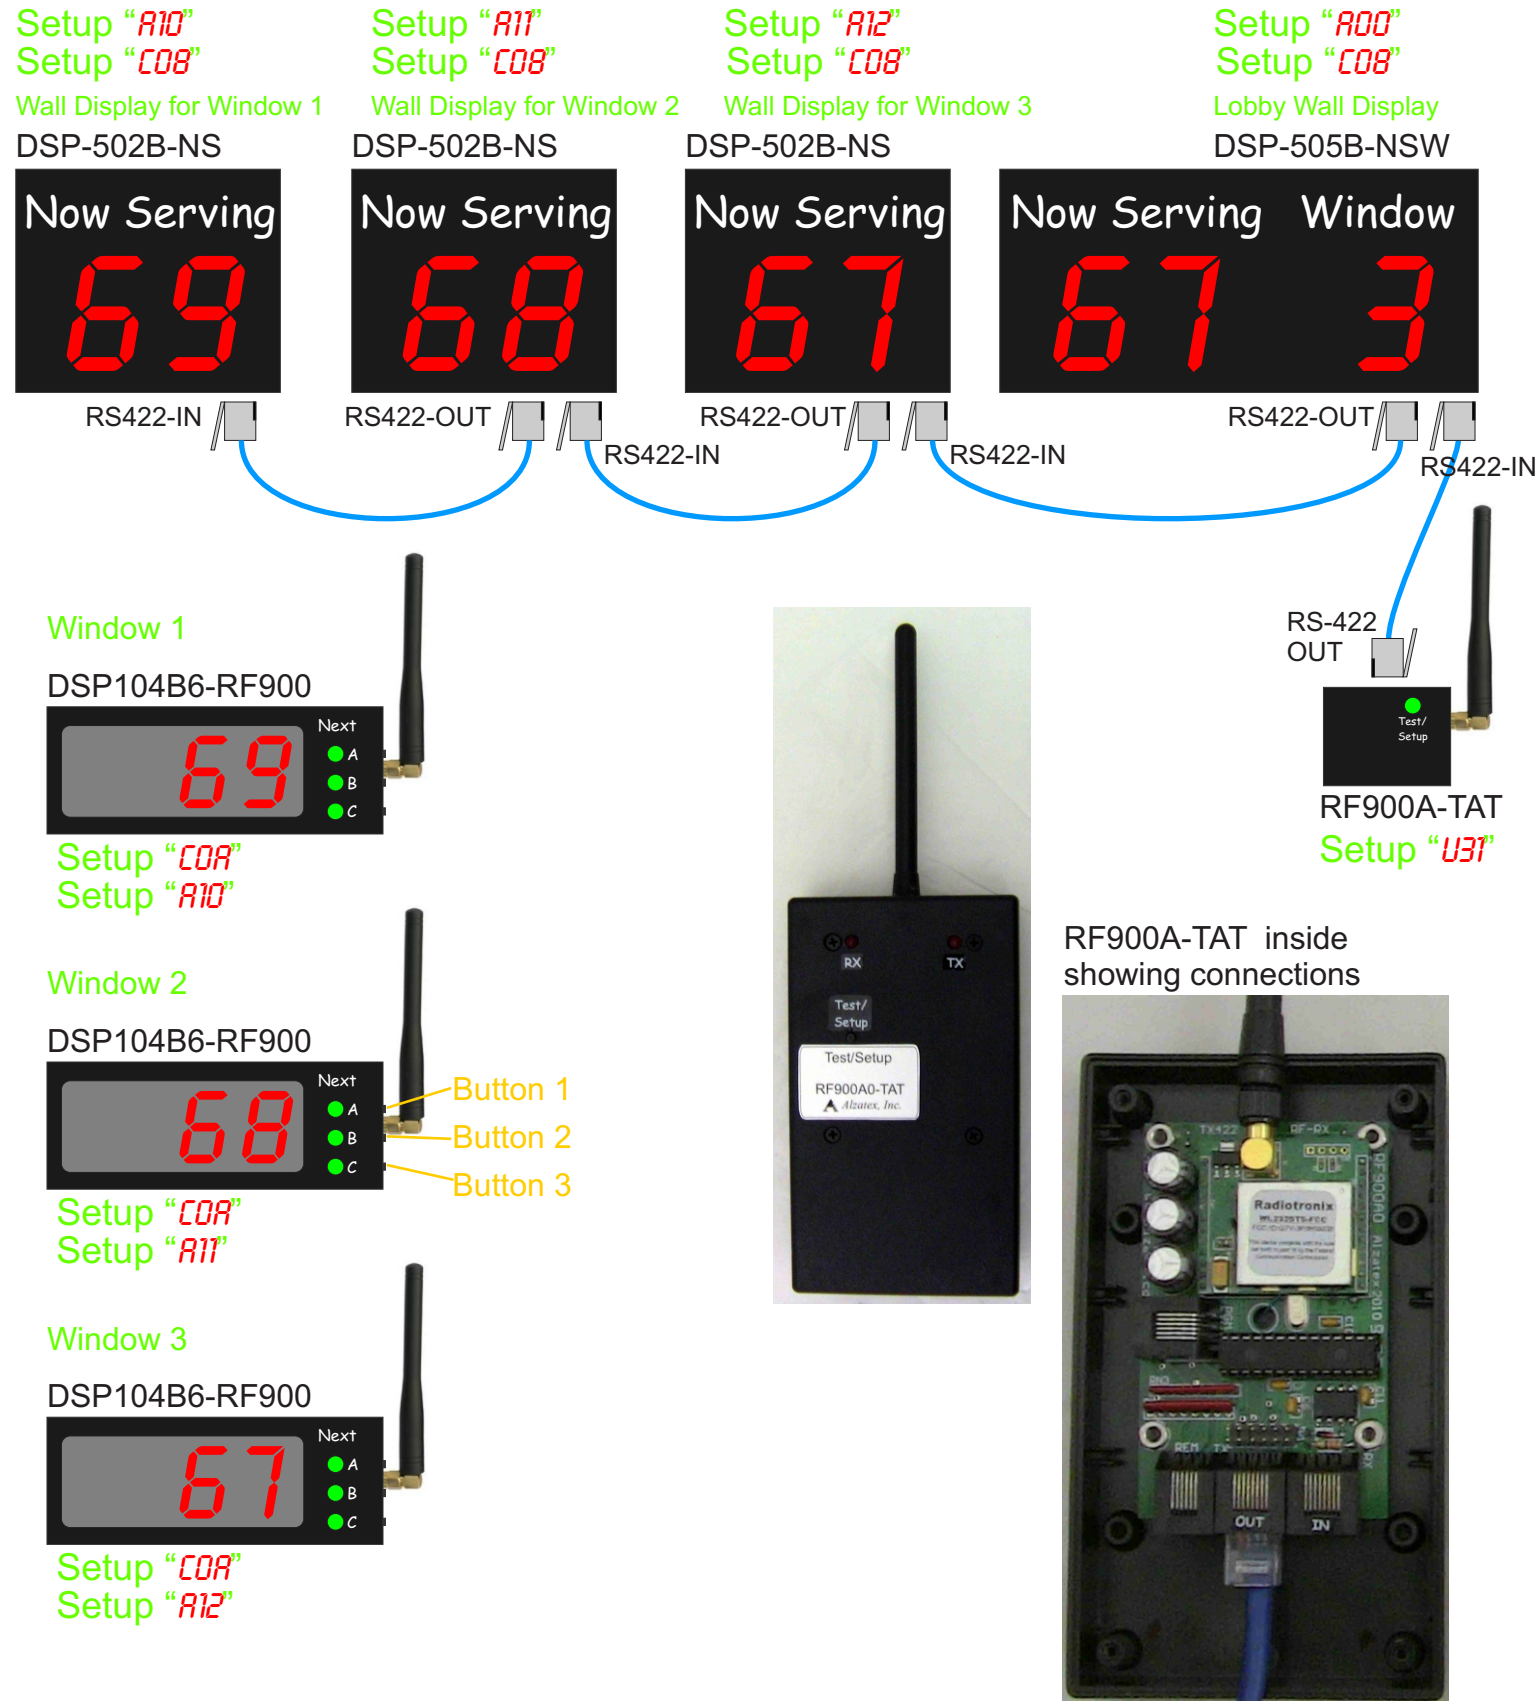



Commands from RF900A-TAT to DSP502/3B
and to DSP104B6-RF900

"L069 Wall Display ticket number

"LA69 Window 1 ticket number

"LB68 Window 2 ticket number

"LC67 Window 3 ticket number

"KP? Display unit address

Commands from DSP104B6-RF900 to RF900A-TAT

"Kews Increment to next ticket number

"KE=A Reset ticket number to 1

"KE?A To display the Unit address.

Buttons on the front:

Pressing button A sends "KEAA to increment the ticket number.

Press and hold button A sends "KEaA.

(Not used)

Pressing button B sends "KEBA to increment the ticket number.

Press and hold button B sends "KEbA.

(Not used)

(Not used)

Pressing button C sends "KECA to increment the ticket number.

Press and hold button C sends "KEcA.

(Not used)

(Not used)

Buttons on the side:

Pressing button 1 sends "KEDA to increment the ticket number.

Press and hold button 1 sends "KEdA.

(Not used)

(Not used)

Pressing button 2 sends "KE>A (not used)

Press and holding Button 2 sends the command "KE?A to display the unit address.

Pressing button 3 sends "KE<A (not used)

Press and holding button 3 sends the command "KE=A Reset ticket number to zero.

Commands:

"LA67 Displayed ticket service code and number for window 1;

"LB68 Displayed ticket service code and number for window 2;

"KEsw s=Type of service (A-H); w=Window number (@,A-z) (ASCII 40-7F)

"KP? Display the unit address of all displays.

Controller Setup (RF900A-TAT)

Setup "**U31**" = Echo on TX422 port

Worker terminal Setup (DSP104B6-RF900)

Setup "**CDR**" = No echo

Setup "**A10**" = Unit address

Lobby Wall Display Setup (DSP502/3)

Setup "**ADD**" = Unit address

Setup "**ADB**" = Unit address

Window Display Setup (DSP502/3)

Setup "**A10**" = Unit address

Setup "**ADB**" = Unit address